



Auxiliary Vehicle Restraint Installation Instructions

1

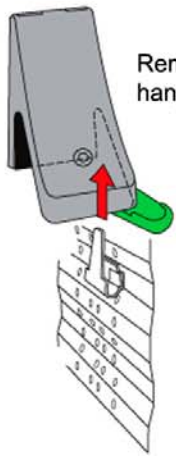

Remove AVR from hanger.


2

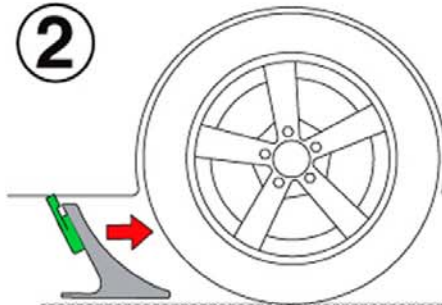

Place AVR outboard of vehicle's wheel base in four locations as shown. AVR handle to be pointing outward in storage position.

****The front face of the AVR should be in contact with the vehicle's tire surface****


3

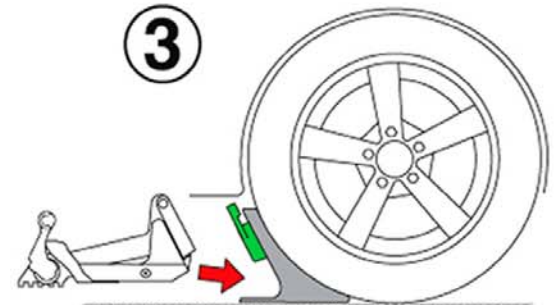

Center the Grate Lock Chock over the base of the AVR locating the spring loaded face plate as close to the back of the AVR as possible. Lock the Grate Lock Chock in place following the guidelines set by IEC Holden.


Match colors...Red AVR/Red Chock - Green AVR/Green Chock.

5

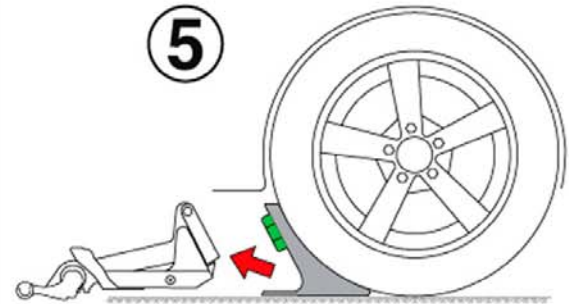


To remove the AVR, unlatch the Grate Lock Chock following IEC Holden's directions and remove it from the grate. Remove the AVR from the grate.

4

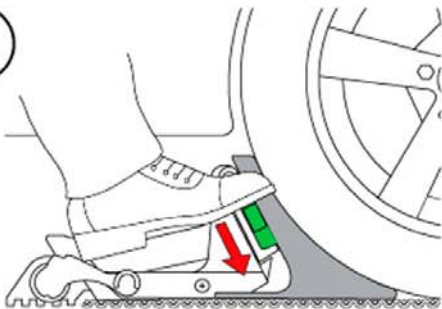


Adjust the AVR by stepping down on the adjustment lever until the rear of the AVR is in contact with the Grate Lock Chock face plate, and the front is in contact with the tire.

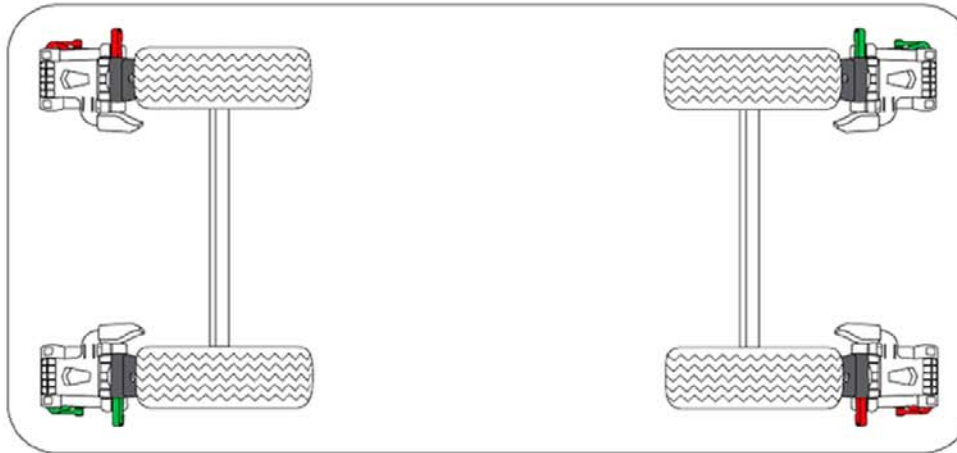

If in its fully extended state, the AVR's adjustment mechanism does not contact the Grate Lock face plate—reset the AVR to its storage position and reset the Grate Lock Chock closer to the tire by one grating increment.

Re-adjust the AVR lever.

6

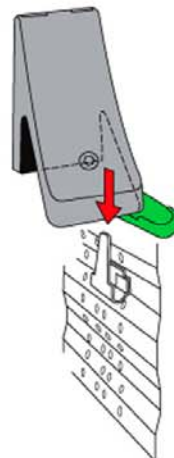

Rotate the adjustment mechanism to its storage position (Adjust lever to "up" position). Place the AVR onto the storage hanger with the handle facing the side screen (as shown).



2175 Aucutt Road
Montgomery, IL 60538
630-801-1616

CONTACT ZEFTEK FOR ANY TECHNICAL QUESTIONS